



Baby Press

Made with Love.

User Manual

Compact Heat Press





Reproduction, memorization and transmission of all and parts of this publication are prohibited in any form without the prior written authorization and consent of **SISER S.r.l.**

SISER S.r.l., with its policy of constant improvement and development of its products, reserves the right to alter the specifications, equipment and instructions for use and maintenance. at any time and without notice.

Index

Safety Precautions	4-5
Product Description	7
Basic Parameters	8
Power On/Off	9
Set Time - Simple mode	10
Set Time - Professional mode	11
Set Temperature - Simple mode	12
Set Temperature - Professional mode	13
Product placement and storage	15
Demolition and disposal	16
Terms of Guarantee	17



Safe Operation Instructions

To reduce the risk of injury, death, or property damage due to electric shock or fire, follow these safety precautions!

Guarantee

Within 24 months, if this product experiences a performance failure listed in the 'Product Performance Failure Table' and it is confirmed by the factory, it is eligible for free maintenance service. If the warranty period has expired, or if the damage is caused by force majeure or human factors, the machine is not covered by the warranty, and repairs will be at your own expense.

Safety instruction:

1. Keep unplug when moving the machine.
2. Keep unplug when installing accessories.
3. Place on a flat and stable platform and operate under ventilated conditions.
4. Wear special protective equipment when operating the machine.
5. Do not use this machine in a hazardous location.
6. Do not use when the machine is not working properly.
7. Do not disassemble and repair this machine.
8. Do not use an unsuitable AC outlet.
9. Do not touch the heating plate when the machine heating.
10. This Appliance is not intended for use by persons(including children) with reduced physical, sensory or capabilities, or lack of experience and knowledge, unless they have been given supervision concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. For household use only.



Product description

Comfortable Handle →

Auto-Off Feature →

Display Screen →

Dry-even Heat →

Precision Tip →

Safety Base →



Basic parameters

Model	Rated Voltage	Rated Frequency	Rated Power
P0203	220V	50hz	300W
P0203	120V	60hz	150W
Transfer Area	3.5"x2.3" (9cmx5.8cm)		
Material Quality	Plastic / Alloy		



Vinyl Film
Time(65S)Temperature (165°C/329°F)



Sublimation Paper
Time(30S)Temperature (210°C/410°F)

The above parameters are for reference only,
customers please change the settings according to different materials!

Power On / Off



 
Long press for 3 seconds to power on.
Long press for 3 seconds to power off.

Countdown starts:

After short press, countdown starts.


End of countdown:

After another short press, the countdown ends, and the motor stops working at the same time.

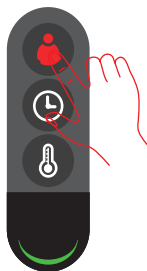

Fahrenheit / Celsius

 Press and hold the **TIME** and **TEMPERATURE** buttons simultaneously for **3 seconds** to switch the temperature unit.

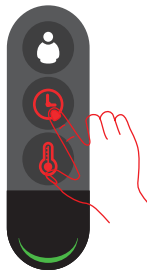

Time Setting – Simple/Professional Mode



Simple Mode:

ON


range 10–120 seconds,
adjustable in 5-second steps.



Professional Mode:

OFF

 range 10–999 seconds,
adjustable in 1-second steps.

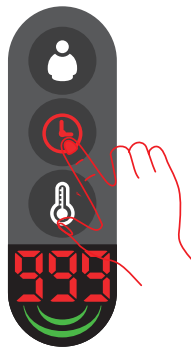

Temperature Setting – Simple/Professional Mode



 
Simple Mode:

ON
4 predefined levels.



Professional Mode:

OFF
range 140–410°F,
adjustable in 1°F steps.

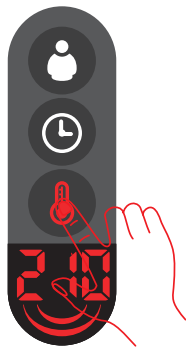

Note: Temperature is displayed in Fahrenheit.

Setting Time & Temperature – Procedure

Plug in the power cord.

Do not press the POWER BUTTON.



To set the time mode, press and hold the **TIME** button for **5 seconds**.

To switch from **SIMPLE (ON)** to **PROFESSIONAL (OFF)** mode, press and hold for another **5 seconds**.

Wait for the text to disappear from the display.



To set the temperature mode, press and hold the **TEMPERATURE** button for **5 seconds**.

To switch from **SIMPLE (ON)** to **PROFESSIONAL (OFF)** mode, press and hold for another **5 seconds**.

Wait for the text to disappear from the display.

Once both modes are set, turn on the machine by pressing and holding the POWER BUTTON for **5 seconds**.

Setting Time & Temperature – Procedure

To set the time, briefly press the **TIME** button to adjust seconds.



The **TIME** button increases (+).

The **TEMPERATURE** button decreases (-).

Wait a few seconds.

To set the temperature, briefly press the **TEMPERATURE** button to adjust.



The **TIME** button decreases (-).

The **TEMPERATURE** button increases (+).

Once the desired settings are selected, briefly press the **POWER BUTTON** to start the **TIMER**.

Press it again briefly to stop the **TIMER**.



Product Placement And Storage

 
During the use of the product, the heating plate (A) will remain at a high temperature and must be placed on a safety base (B) to avoid danger!

A: Heating plate

B: Safety base

Store

1. After turning off, wait for the product to cool down completely.
2. Once the power cord is wrapped, place the product in its packing box and store it in a dry, safe location.

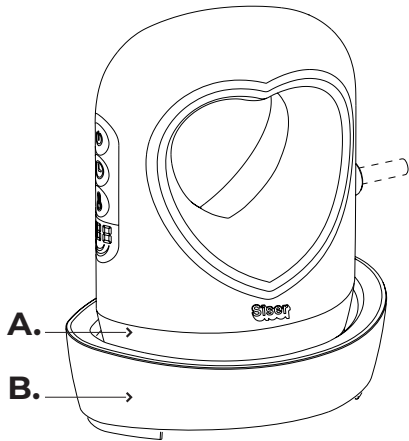

Demolition and disposal

If the machine has to be demolished, it must be separated into similar parts, which must be separately disposed of in accordance with legislation in force.

The replaced parts must not be disposed of in the environment, but disposed of according to legislation in force in the location of machine use. The basic components of the machine parts are steel, stone wool, aluminium and plastic.



The symbol

Depicted on the machine means the waste is subject to “separate collection”. Therefore, the user must take (or have taken) the waste material to a waste sorting facility run by local municipalities, or return it to the retailer on purchase of a new, equivalent machine.

In Italy, illegal disposal of the product by the user is subject to a fine pursuant to Art. 255 and thereafter of Legislative Decree no. 152/06.

Terms of Guarantee

SISER S.r.l. guarantees its **BABY PRESS** Machine for a period of 24 months from the date of shipment.

The warranty will only be recognised if the machine was used correctly following the instructions given in this manual.

During the warranty period, any defective or broken parts will be repaired or replaced free of charge by SISER S.r.l. on its premises in Vicenza.

Any defective parts replaced must be returned to Siser S.r.l. after replacement. The purchaser assumes all transport or delivery charges of the spare parts.

All consumables and materials used for routine maintenance are excluded from the warranty, as well as any parts damaged due to improper use of the machine.

Repairs and/or replacements made during the warranty period do not extend the warranty.



Scarica il manuale in italiano



Handbuch auf Deutsch herunterladen



Téléchargez le manuel en français



Baby Press

Made with Love.

Oh, the tiny things you'll make!



Baby Press

Made with Love.

SISER S.r.l.

Viale della Tecnica, 18
36100 VICENZA, ITALY
tel. +39 0444 287960
fax +39 0444 287959

info@siser.it - www.siser.com

